



HONOR HM4

SERIES

BY LUCID AIRSOFT

INSTRUCTION MANUAL



TABLE OF CONTENTS

1	Safety and Handling	Pg. 1
2	Battery	Pg. 2
3	Loading and Magazine Removal	Pg. 2
4	Hop-up	Pg. 3
5	Safety	Pg. 3
6	Stock	Pg. 3
7	Important Notes	Pg. 3



ALWAYS READ MANUAL
CAREFULLY BEFORE
OPERATION.



PARENTAL GUIDANCE IS
RECOMMENDED FOR USERS
UNDER THE AGE OF 18




CARELESS SHOOTING MAY
CAUSE EYE DAMAGE.




LUCID
AIRSOFT


1

SAFETY AND HANDLING


 Always read through this manual before operation

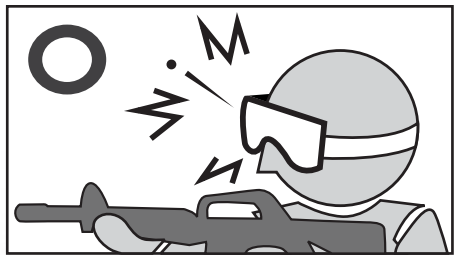

Make sure to wear eye protection.

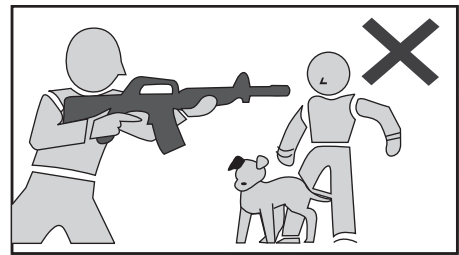


Don't train on people or animals.

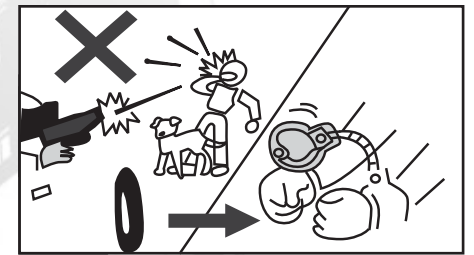


Don't shoot mischievously.




Don't look close to the muzzle.

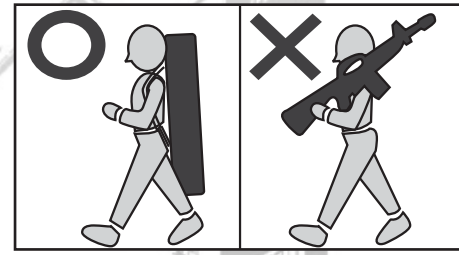


Use a bag or box when transporting.

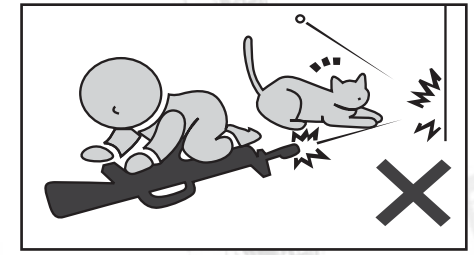


Keep out of the reach of children.

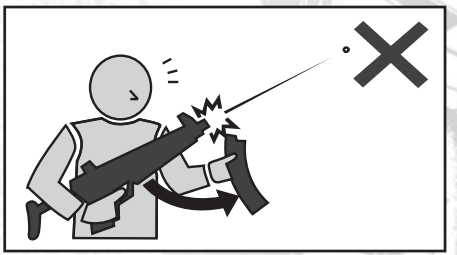


Gun may still fire with magazine removed.

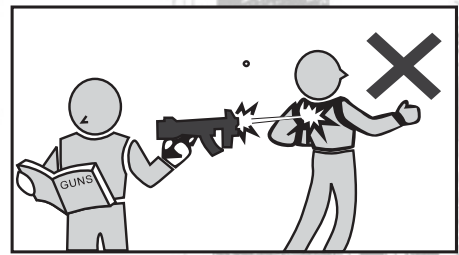


Never shoot casually.

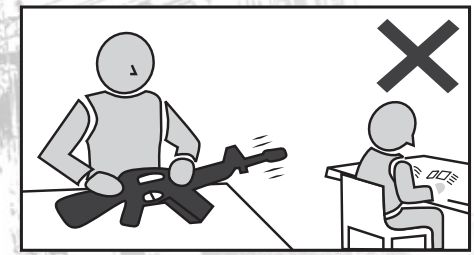


Practice safe muzzle control at all times.

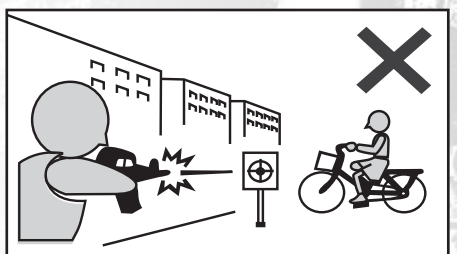

Don't shoot where there is people or transportation.

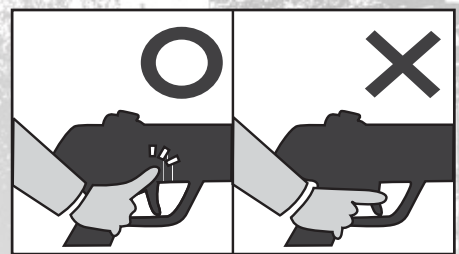

Keep finger off the trigger until you're ready to shoot a target.

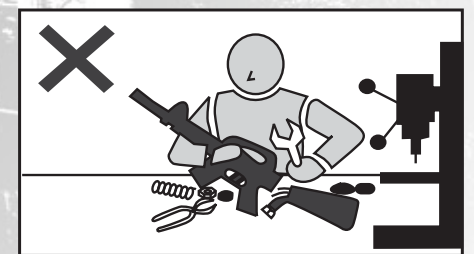

Do not dismantle or attempt repairs yourself.

2

BATTERY



SLIDE FIXING RING BACK AND REMOVE FOREGRIP FROM REAR



INSERT BATTERY INTO THE BOTTOM HALF OF THE FOREGRIP AND ATTACH WIRE CONNECTORS. ENSURE BATTERY IS FULLY SEATED.



REINSTALL THE FOREGRIP FROM THE FRONT TO THE BACK. PUSH THE FIXING RING FORWARD TO COMPLETE BATTERY INSTALLATION.

3

LOADING AND MAGAZINE REMOVAL



PRESS THE RELEASE BUTTON TO REMOVE MAGAZINE. SUPPORT MAGAZINE WITH HAND TO PREVENT IT FROM DROPPING



LOAD MAGAZINE WITH 6MM BBs FROM THE HATCH LOCATED AT THE TOP OF THE MAGAZINE. CLOSE HATCH WHEN FINISHED.



SET THE MAGAZINE IN AN UPWARD MOTION. A CLICK SOUND WILL BE HEARD WHEN THE MAGAZINE IS PROPERLY CONNECTED.



WIND THE BOTTOM OF MAGAZINE IN A CLOCKWISE MOTION UNTIL TIGHT.

4 HOP-UP



SLIDE HOP-UP ADJUSTMENT FORWARD TO DECREASE HOP AND SLIDE BACK TO INCREASE.

5 SAFETY




SET THE FIRING SELECTOR TO POSITION 1 FOR SAFE, POSITION 2 FOR SEMI-AUTO, AND POSITION 3 FOR FULL-AUTO.

6 STOCK



ADJUST STOCK TO DESIRED POSITION BY PRESSING THE STOCK RELEASE BUTTON AND MOVING THE STOCK FORWARD OR BACK.

7 Important Notes

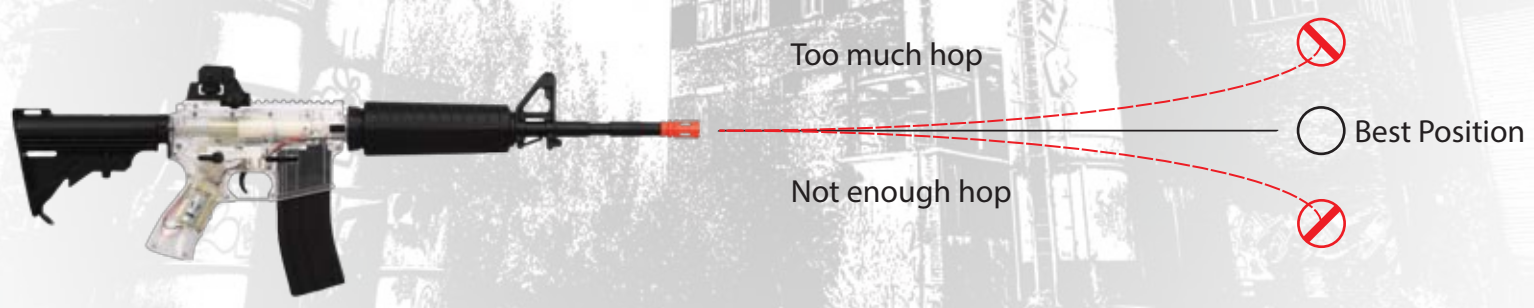

Too much hop



Best Position



Not enough hop